


Business Use Pen-Style Laser Pointer

OWNER'S MANUAL — Please read before using this equipment.

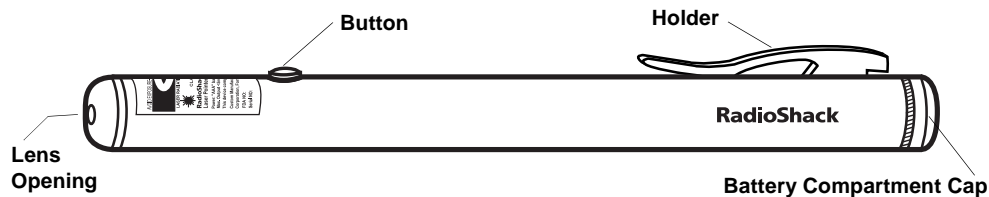

Your RadioShack Business Use Pen-Style Laser Pointer lets you use laser light to point to an object. You can use the pointer on a board or projection screen at meetings, lectures, classes or seminars. You can use your laser pointer at distances of up to 300 feet (91.4 meters), letting you easily direct your audience's attention.

Warnings:

- Never point the laser pointer at anyone.
- Never look directly into the laser beam.
- Keep the laser pointer away from children.
- Follow the instructions on the laser pointer's danger label.
- Use of controls or adjustments, or the performance of procedures other than specified herein, can result in hazardous radiation exposure.



Cautions:

- Use only fresh batteries of the required size and recommended type.
 - Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
1. Remove the battery compartment cap by turning it counter-clockwise.
 2. Place the batteries in the compartment with their negative (–) ends toward the front of the laser pointer.
 3. Replace the cap.

When the laser beam dims or the laser pointer stops operating properly, replace the batteries.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the laser pointer for a month or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

INSTALLING BATTERIES

Your laser pointer requires two AAA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

OPERATION

Hold down the button behind the lens opening to light the laser beam. Release it to turn off the laser.

CARE

Keep the laser pointer dry; if it gets wet, wipe it dry immediately. Use and store the laser pointer only in normal temperature environments. Handle the laser pointer carefully; do not drop it. Keep the laser pointer away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the laser pointer's internal components can cause a malfunction and might invalidate its warranty. If your laser pointer is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Laser Type Index Guided
Wavelength 630 – 680 nm
(Class IIIa Product)
Output Power <5 mW
Beam Expanse <2 mRad
Operation Range 300 feet (91.4 meters)
Battery Life 12 Hours
(Continuous Operation)
Weight (without batteries) 1.27 oz
(36 g)
Outer Length 5³/₈ Inches
(137 mm)
Material Brass

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period.

You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack Corporation
Fort Worth, Texas 76102

63-1055
04A01
Printed in Taiwan